
FOR HD (HUIDU) LED SIGNS

LED-Cloud

Quick Guide

Run your sign from any web browser



LED-Cloud is Huidu's website for updating HD LED signs. Upload your files, build a **program** and send it to your sign over the internet.



BEFORE YOU START


- ✓ Your LED-Cloud login details (from iCatcher).
- ✓ Your pictures or videos, saved on your computer.
- ✓ Your sign's width and height in pixels.
- ✓ Your sign switched on and online.

1 Log in

- 1 Go to **www.led-cloud.com** in Chrome or Edge.
- 2 The first time, the login page opens in Chinese, with 小灰云 under the cloud logo. Click **language: 简体中文** at the top right and choose **English**. The logo changes to **XiaoHui Cloud**. Your browser remembers this, so next time it opens in English. On another computer, or in a private window, you may need to choose English again.
- 3 Enter your user name, mobile number or email and your password, then click **Login**.

GOOD TO KNOW

Log in at least once every six months, or LED-Cloud may clear an unused account.

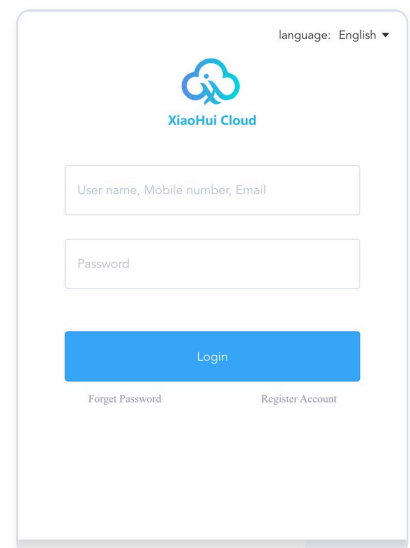

The login page in English.

2 Check your sign is online

- 1 Click **Device** in the top menu.
- 2 Find your sign in the Device List. A **green** icon under Device dynamics means it's online.
- 3 Note the **Resolution** under Device Information. You'll need it for your program.

3 Upload your pictures or videos

- 1 Click **Source** in the top menu.
- 2 Choose the **Image** or **Video** tab.
- 3 Click **Upload Materials**, then **Select**, and choose your file.
- 4 When the upload finishes, click **Off** to close the window.

IMAGES

PNG, JPG, GIF, BMP, up to 20 MB

VIDEO

MP4, AVI, MOV, MKV, WMV and more, up to 4 GB

New accounts come with 5 GB of storage. New files are checked automatically. A file can't go into a program until it's approved and finished converting.

4 Create a program

- 1 Click **Program** in the top menu (not Program List). Choose the sign type in the left sidebar (for example **Full color**), then click **New Program**.
- 2 Enter a Program Name. Use **Select Device** to fill in your sign's width and height, or type them. Click **OK**. The editor opens.

ADD A PICTURE OR VIDEO

- 3 Click **Image** or **Video** in the toolbar. Drag the edges of the new area to size it, or type X, Y, W and H under Area(px).
- 4 In the right panel, click the **+** under Image (or Video), choose your file and click **OK**.

ADD TEXT

- 5 Click **Text**, then drag the text area into place and resize it.
- 6 Click **Edit Text**, type your message, set the colour and font size, then click **OK**. Some tips in the text tools show in Chinese. That's normal.

FINISH

- 7 Click **Save** at the top right, then **Off** to close the editor.

5 Choose when it plays Optional

- 1 On the Program page, click **Play Control** next to your program.
- 2 Tick Playing time period and set the start and end times, such as 09:00:00 to 18:00:00. For a full colour program, click **+** to add another time slot.
- 3 Tick Playing week. All seven days are ticked for you, so untick the days it shouldn't play.
- 4 To play only between two dates, tick Playing Date and set the start and end dates. Both start as today's date, so check the end date.
- 5 Click **OK**.

6 Send it to your sign

- 1 On the Program page, tick your program. To send several at once, they need the same size and type.
- 2 Click **Send**.
- 3 In the Send Program window, tick your sign on the left. Drag the programs on the right to change their order.
- 4 Choose how to update. **Additional Update** (the default) adds this program to what's already on the sign. Switch to **Complete Update** to replace everything on the sign with this list.
- 5 Click **Send**, then close the window when it's done.

GOOD TO KNOW

Old content still showing between your new programs? It was sent with Additional Update. Send again with Complete Update. If the sign is offline, the send waits and goes through when it's back online. The Log menu shows each send's status.

7 Change a program later

- 1 Click **Program** in the top menu, find your program and click **Edit**.
- 2 Make your changes, then click **Save** and **Off**.
- 3 Tick the program and click **Send** again.

8 Adjust brightness Optional

- 1 Click **Device**, then **Details** next to your sign.
- 2 Click **More** and choose **Brightness Setting**.
- 3 Choose **Default** for one fixed level, or tick **Customize** and set Time Strategy rows, each with its own times and level. **Automatically** needs a light sensor.
- 4 Click **OK**.

BEST LEFT ALONE

The same **More** menu has **Empty the Program** and **Restart**. Leave them to iCatcher: Empty the Program wipes the content from your sign.

9

Quick fixes

IF THIS HAPPENS

TRY THIS

My sign's icon isn't green

The sign is offline. Check it has power and an internet connection, then refresh the page.

My sign isn't in the Send list

The program's size or type doesn't match the sign. Check the Resolution under Device Information, then make a new program at that size and send it.

Old content keeps playing

Send again and switch to Complete Update, so only your new list stays on the sign.

The sign didn't change

Check you clicked Save in the editor, then send again with your sign ticked. Look in Log for the result.

A file won't upload or can't be used

Check the size limits on page 3. New files must be approved and converted before you can use them.

It asks for a verification code

LED-Cloud sometimes sends a code to the email on your account. Check your inbox and junk mail, then enter the code.



Prefer your phone? Huidu's **LedArt** app updates the same signs over Wi-Fi, and **HDPlayer** does it from a Windows PC. Links and our other guides are at icatcher.com.au/downloads.

Need help?

Stuck on a step or forgotten a password?
Get in touch and we'll help.



MOBILE
0416 053 335



PHONE
08 9335 7944



WEB
icatcher.com.au



EMAIL
info@icatcher.com.au



VISIT
Unit 2/328 Orrong Road, Welshpool WA 6106

Tell us which sign it is, what you were trying to do and what you saw on screen.