
FOR HD (HUIDU) LED SIGNS


LedArt App

Quick Guide

Run your sign from your phone



LedArt is Huidu's phone app for HD LED signs. Your phone connects straight to the sign's own Wi-Fi, so you need to be near the sign.

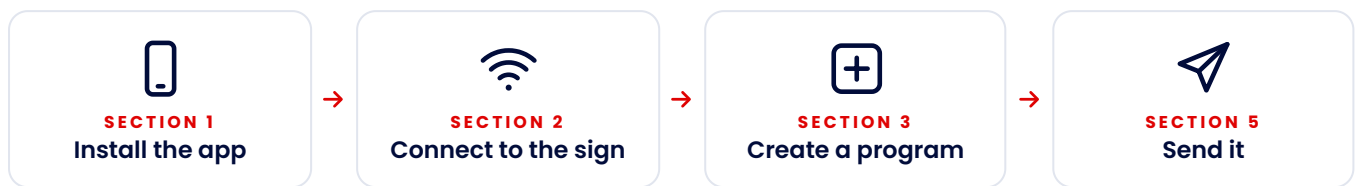

BEFORE YOU START

- ✓ An iPhone (iOS 13 or later) or Android phone (Android 7 or later).
- ✓ The sign switched on, with you close by.
- ✓ Your sign's Wi-Fi name and password (from iCatcher).
- ✓ Your photos or videos, saved on your phone.

1 Install the app

- 1 Search for **LedArt** in the App Store or Google Play, or use the links at icatcher.com.au/downloads. Check the developer is Shenzhen Huidu Technology.
- 2 Open the app. If it asks you to sign up, follow the steps on screen.
- 3 iPhone: when asked, allow LedArt to find devices on your local network. Android: allow location when asked. The app needs this to find your sign.

NOTE

LedArt works with full colour HD signs and with many single and two colour HD text signs. Huidu also has **LedArt lite**, a simpler app made for single and two colour signs. Not sure which suits your sign? Ask iCatcher.

2 Connect to your sign

- 1 On your phone, open **Settings** › **Wi-Fi**.
- 2 Join your sign's Wi-Fi network using its password from iCatcher.
- 3 Open LedArt and tap the **Devices** tab at the bottom.
- 4 If your sign isn't showing, tap the search icon at the top right and choose it. It appears as a card with its status and screen size.

TIP

Your phone may warn that the sign's Wi-Fi has no internet. That's normal. Choose to stay connected.

3 Create a program

- 1 Tap the **Programs** tab at the bottom of the screen.
- 2 First time only: add your display. Select your sign, then check the screen name and display size match your sign.
- 3 Tap **New program** under your display. The editor opens.

4 Add pictures, video and text

- 1 Tap **+** and choose what to add, such as a picture, video, text or clock.
- 2 For an image or video, tap the **+** in its settings below the canvas and pick your file.
- 3 For text, type your message and set the font, size and colour.
- 4 Drag the blue handles to resize an area. Press and hold the middle of an area to move it.
- 5 Add more areas to build a layout.

5 Send it to your sign


- 1 Tap **Send** at the top right of the editor.
- 2 Keep the app open and stay on the sign's Wi-Fi until it finishes.
- 3 To play several programs in a loop, tick them in the program list and tap **Send** at the bottom.

LAYOUT IDEAS



Picture with a clock

Add the image area first, then a clock beside it.

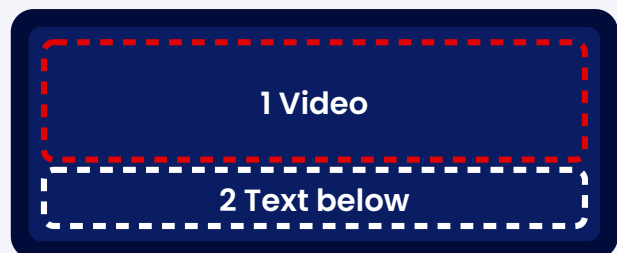

Video with text below it

Add the video area at the top, then a text area underneath.



Updating from a computer instead? Use **LED-Cloud** (www.led-cloud.com) or Huidu's **HDPlayer** for Windows. Links and our other guides are at icatcher.com.au/downloads.

6 Timing and handy settings

When it plays: in the editor, open the program settings to set the dates, times and days it plays.

These are on your sign's device screen:

Brightness

Set one level, or set levels for different times, such as dimmer at night. The automatic setting only works if your sign has a light sensor.

Time

Copy your phone's date and time to the sign. Do this if your program shows a clock.

Screen on and off

Set an on time and an off time, so the screen turns on and off by itself.

Best left alone

Any option that clears or empties programs wipes the content from your sign. Leave the Wi-Fi, hardware and other settings to iCatcher.

7 Quick fixes

IF THIS HAPPENS

TRY THIS

The app can't find my sign

Check your phone is on the sign's Wi-Fi, not your usual network. iPhone: Settings, Privacy & Security (Privacy on older iPhones), Local Network, turn on LedArt. Android: check Location is turned on and LedArt is allowed to use it. Move closer and search again.

The Wi-Fi password doesn't work

It may have been changed. Ask iCatcher for the current password.

Content looks squashed or cut off

Check the display size in the program list matches your sign's screen size.

A video doesn't show

Use an MP4 video (H.264) made at your sign's size. How many videos can play at once depends on the player inside your sign: some play only one video area and some can't play 4K. Try a single video area, or ask iCatcher what your sign supports.

Need help?

Stuck on a step or forgotten a password?
Get in touch and we'll help.



MOBILE
0416 053 335



PHONE
08 9335 7944



WEB
icatcher.com.au



EMAIL
info@icatcher.com.au



VISIT
Unit 2/328 Orrong Road, Welshpool WA 6106

Tell us which sign it is, what you were trying to do and what you saw on screen.