FOR HD (HUIDU) LED SIGNS

LedArt Guide

Run your sign from your phone



LedArt is Huidu's phone app for HD LED signs. Your phone joins the sign's own Wi-Fi, so you need to be near the sign.

SECTION 1
Install

SECTION 2
Connect

SECTION 3
Add your display

SECTION 6
Send it


BEFORE YOU START

- An iPhone (iOS 13 or later) or an Android phone (Android 7 or later).
- The sign switched on, with you close by.
- Your sign's Wi-Fi name and password (from iCatcher).
- Your photos or videos, saved on your phone.

NOTE LedArt works with full colour signs and with single and two colour text signs. Huidu's **LedArt Lite** is a simpler app for single and two colour signs. The pictures in this guide are from Android: the iPhone app looks a little different.

1 Install and open


1. Search for **LedArt** in the App Store or Google Play, or use the link at **icatcher.com.au/downloads**. The developer is Shenzhen Huidu Technology.
2. Open it. Tick the box to agree to the Terms of Service and Privacy policy, then tap **Agree**.
3. If it asks you to log in, follow the steps on screen. Stuck? Call iCatcher.
4. When asked, allow LedArt to use your location (Android) or to find devices on your local network (iPhone). It needs this to find your sign.

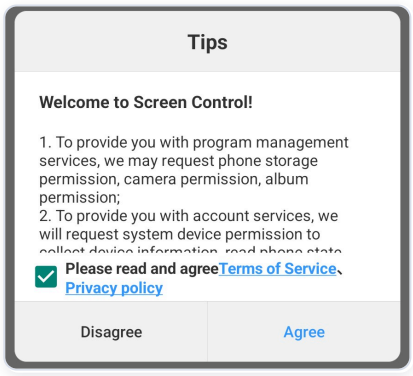

Tick the box, then Agree.

2 Connect to your sign

1. Turn off mobile data and Bluetooth on your phone, as Huidu suggests.
2. Open your phone's Wi-Fi settings and join your sign's Wi-Fi. The password is from iCatcher.
3. Open LedArt and tap **Device** at the bottom. Your sign appears under My device. If it says No devices found on the current network, check your phone is still on the sign's Wi-Fi.

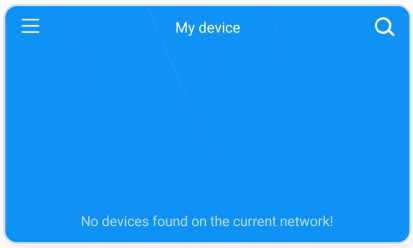


My device, before the phone joins the sign.


TIP Your phone may warn that the sign's Wi-Fi has no internet. That's normal. Stay connected.

3 Add your display

First time only

1. Tap **Program** at the bottom, then **New display**.
2. If your sign is listed, tap it, then **Add**: LedArt reads its size. No sign yet? Tap **Offline editing** and pick your player's model.
3. Check **Screen name**, the Width and Height (your sign's size in pixels) and **Device model**, then tap **OK**.

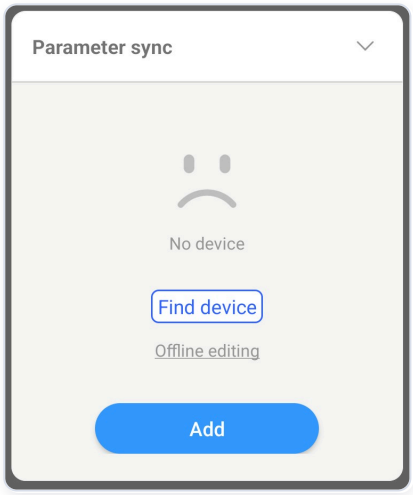

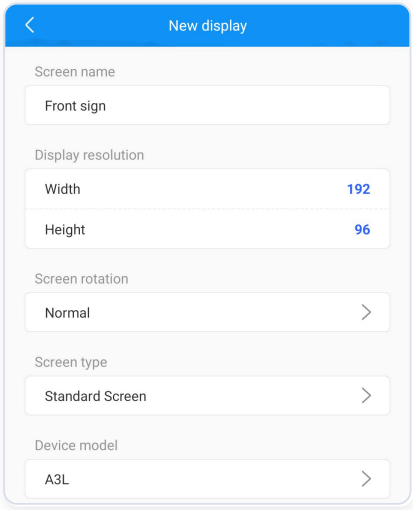

Add your sign, then check its size.

4 Make a program


Tap **New program** under your display. A new program starts with one picture area. The tabs under the preview switch between the program and each area, and **+** at the right of the tabs adds more.

A PICTURE OR VIDEO


1. In the picture area's settings, tap **+** and choose a picture.
2. For a video, tap **+** at the right of the tabs and choose **Video**.
3. To remove an area, tap the x on its tab and confirm.

WORDS

1. Tap **+** at the right of the tabs, then **Text**.
2. Tap the text box, type your words and set the font, size and colour. Tap the green tick.
3. For scrolling words, turn on **Single line** and set **Effect** to **Continuously move left**. **Speed** sets how fast.

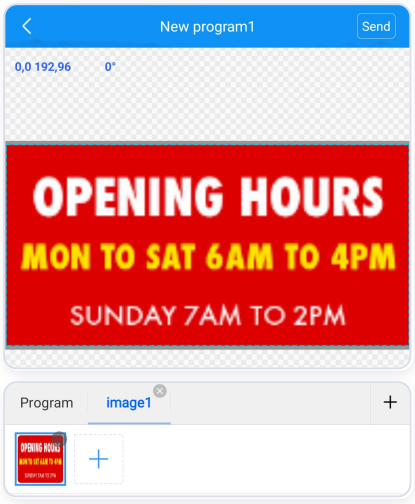


A picture area. Send is at the top right.

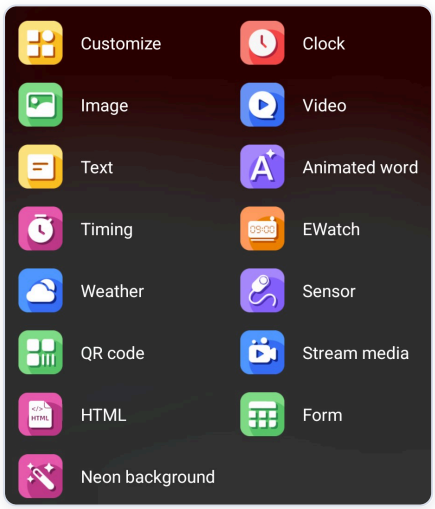

\+ adds text, video, a clock, a countdown (Timing) and more.




Type your words, then tap the green tick.

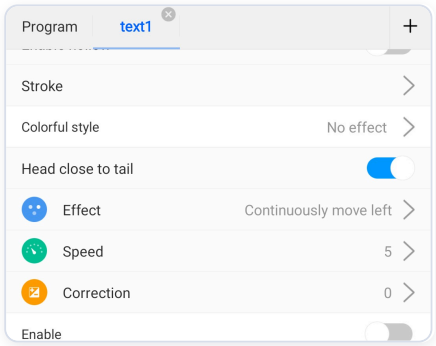

Single line words scroll left.

5 Choose when it plays Optional


1. Tap the **Program** tab.
2. Turn on **Specify time** and set **Start time** and **End time**.
3. Tap **Specify week**, turn off the days it shouldn't play, and tap the green tick.
4. **Specify date** sets a date range.

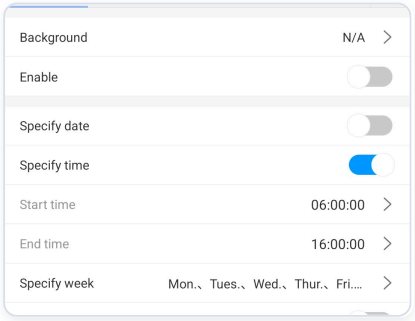

Monday to Saturday, 6 am to 4 pm.

6 Send it to your sign

1. Tap **Send** at the top right of the editor.
2. Choose your sign and tap **OK**. Keep the app open and stay on the sign's Wi-Fi until it finishes.
3. To play several programs in turn, tick them in the Program list and tap **Send** at the bottom.
4. LedArt keeps your programs on your phone, so you can change and send them again later.

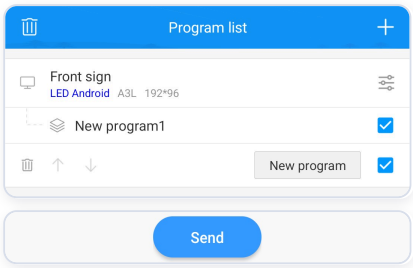


The Program list, with Send at the bottom.

7 Sign settings

Tap **Device** at the bottom. These settings need your phone on the sign's Wi-Fi.

BRIGHTNESS

1. Tap **Brightness**. Under **Mode**, **Default** is one level, **Custom** sets levels by time and **Automatic** needs a light sensor.
2. For Custom, turn on a row, tap its time and set the time and level. Tap **OK**.

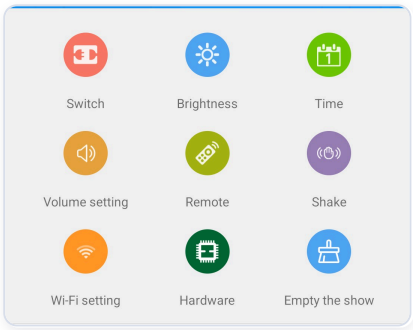


The Device tab.

SCREEN ON AND OFF


1. Tap **Switch** and turn on **Enable**.
2. Turn on a row and set **Screen on** and **Screen off**. Tap **OK**.

THE RIGHT TIME


1. Tap **Time** and set **System timezone** to your city, such as (UTC+08:00) Perth.
2. Check time correction and **Automatic** (Use system provided time) are on: the sign takes your phone's time. Leave Daylight off in WA. Tap **OK**.

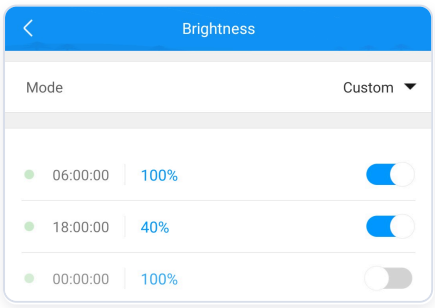

Custom brightness.

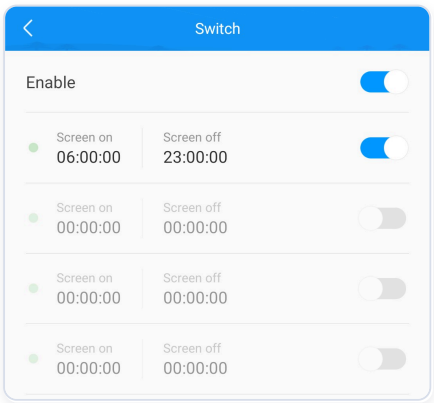

On at 6 am, off at 11 pm.

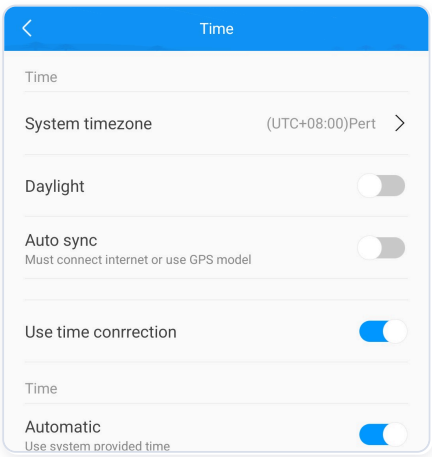

Time, on Perth time.

8 Everyday jobs

Change the words

1. Open the program and tap its text tab.
2. Tap the text box, change the words, tap the green tick.
3. **Send**.

Sections 4 and 6

Show a poster or photo

1. **New program**.
2. In the picture area, tap **+** and choose it.
3. **Send**.

Sections 4 and 6

Play a video

1. **+** at the right of the tabs, then **Video**.
2. Choose an MP4 made at your sign's size.
3. **Send**.

Sections 4 and 6

Show several things in turn

Either add several pictures to one picture area, or tick several programs in the Program list and tap Send.

Sections 4 and 6

Show the time and date

1. **+** at the right of the tabs, then **Clock**.
2. Set its Time zone (it starts on (UTC+08:00)Shanghai, the same time as Perth) and a Font size that fits your sign.
3. **Send**.

Section 4

Count down to an event

1. **+** at the right of the tabs, then **Timing**.
2. Leave Mode on Countdown. Set the Target date, Target time and a Font size that fits, and type your words in Fixed text.
3. **Send**.

Section 4

Play only during opening hours

1. Program tab.
2. Specify time and Specify week.
3. Send again.

Section 5

Dimmer at night

1. **Device** › **Brightness**.
2. Custom, with a lower level for the evening.

Section 7

Screen off overnight

1. **Device** › **Switch**.
2. Enable, then the on and off times.

Section 7

Clock shows the wrong time

1. **Device** › **Time**.
2. Your time zone, then Automatic.

Section 7

9 Quick fixes

IF THIS HAPPENS	TRY THIS
The app can't find my sign	Check your phone is on the sign's Wi-Fi, not your usual network. Android: Location on, and LedArt allowed to use it. iPhone: Settings › Privacy & Security › Local Network, LedArt on. Move closer and try again.
It says No devices found on the current network	Your phone isn't on the sign's Wi-Fi. Join it in your phone's Wi-Fi settings and try again.
The Wi-Fi password doesn't work	It may have been changed. Ask iCatcher for the current password. If LedArt asks you to change it, call iCatcher first.
Content looks squashed or cut off	Check the display size in the Program list matches your sign's size in pixels.
A video doesn't show	Use an MP4 (H.264) made at your sign's size. Some players can't play 4K or more than one video at once. Ask iCatcher what your sign supports.
The clock shows the wrong time	**Device** › **Time**: set your time zone and check Automatic is on, then tap OK. Check the clock's own Time zone too.

BEST LEFT ALONE Leave **Empty the show**, **Wi-Fi setting** and **Hardware** to iCatcher. Empty the show wipes everything from your sign.

On a computer? Use **LED-Cloud** in your web browser, or **HDPlayer** on Windows for full colour signs. Links and our other guides are at **icatcher.com.au/downloads**.

Need help?

Stuck on a step or forgotten a password? Get in touch and we'll help.

MOBILE 0416 053 335
PHONE (08) 9335 7944
WEB icatcher.com.au
EMAIL info@icatcher.com.au
VISIT Unit 2/328 Orrong Road, Welshpool WA 6106

Tell us which sign it is, what you were trying to do and what you saw on screen.