
FOR HD (HUIDU) LED SIGNS

LEDArt App

Quick Guide

Update your sign from your phone



LEDart is Huidu's phone app for HD LED signs. Your phone connects straight to the sign's own Wi-Fi, so you need to be near the sign.



BEFORE YOU START

- ✓ An iPhone or Android phone.
- ✓ Your sign's Wi-Fi name and password (from iCatcher).
- ✓ The sign switched on, with you close by.
- ✓ Your photos or videos, saved on your phone.

1 Install the app

- 1 Search for **LedArt** in the App Store or Google Play and install it. Check the developer is Shenzhen Huidu Technology.
- 2 Open the app and register when asked, for example with your mobile number and a verification code.

NOTE LEDart is for full-colour signs. Single-colour and two-colour text signs use a separate app, LedArt-Lite. Not sure which you have? Ask iCatcher.

2 Connect to your sign

- 1 On your phone, open **Settings** › **Wi-Fi**.
- 2 Join your sign's Wi-Fi network using its password. The name usually starts with the controller model, such as **A3L** or **A6L**.
- 3 Open LEDart and tap **Device** at the bottom.
- 4 If your sign isn't showing, tap **Find device** (or the search icon at the top right) and choose it. It appears as a card with its status and screen size.

TIP Your phone may warn that the sign's Wi-Fi has no internet. That's normal. Choose to stay connected.

3 Create a program

- 1 Tap **Program** at the bottom of the screen.
- 2 First time only: tap **New display**, select your sign under Parameter sync and tap **Add**. Check the Screen name and Display size, then tap **OK**.
- 3 Tap **New program** under your display. The editor opens.

4 Add pictures, video and text

- 1 Tap **+** and choose what to add, such as **Image**, **Video**, **Text** or **Clock**.
- 2 For an image or video, tap the **+** in its settings below the canvas and pick your file.
- 3 For text, type your message and set the font, size and colour.
- 4 Drag the blue handles to resize an area. Press and hold the middle of an area to move it.
- 5 Add more areas to build a layout. Later areas sit on top, so add your background first.

5 Send it to your sign


- 1 Tap **Send** at the top right of the editor.
- 2 Keep the app open and stay on the sign's Wi-Fi until it finishes.
- 3 To play several programs in a loop, tick them in the Program list and tap **Send** at the bottom.

LAYOUT IDEAS



Picture with a clock

Add the image area first, then a clock beside it.

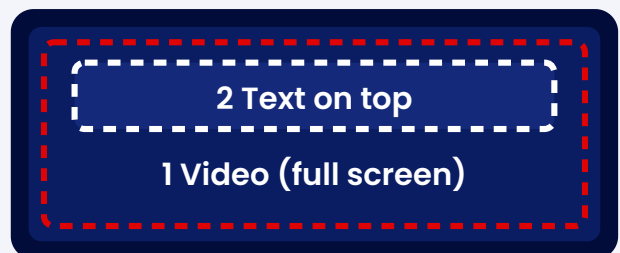

Video with text over it

Add the video area first so it fills the screen, then add the text on top.

6 Timing and handy settings

When it plays: in the editor, tap the **Program** tab and use Specify date, Specify time, Specify week and Specify the playing time.

These are on the **Device** screen:

Brightness

Default sets one level. **Custom** sets levels by time, such as dimmer at night. **Automatic** needs a light sensor. Tap **OK**.

Time

Turn on **Use system provided time** to copy your phone's date and time to the sign, then tap **OK**. Do this if your program shows a clock.

Switch screen

Tap **+** and set an Open screen time and a Screen off time, so the screen turns on and off by itself. Tap **OK**.

Best left alone

Empty the show wipes the content from your sign. Leave the Wi-Fi, Hardware and More settings to iCatcher.

7 Quick fixes

IF THIS HAPPENS

TRY THIS

The app can't find my sign

Check your phone is on the sign's Wi-Fi, not your usual network. Move closer, then tap Find device again.

The Wi-Fi password doesn't work

It may have been changed. Ask iCatcher for the current password.

Content looks squashed or cut off

Check the Display size in the Program list matches your sign's screen size.

A video doesn't show

In the video's settings, use Video transcoding method to lower its resolution, or try a smaller file.

Need help?

Stuck on a step or forgotten a password?
Get in touch and we'll help.



PHONE
08 9335 7944



MOBILE
0416 053 335



WEB
icatcher.com.au



EMAIL
info@icatcher.com.au



VISIT
Unit 2/328 Orrong Road, Welshpool WA 6106

Tell us which sign it is, what you were trying to do and what you saw on screen.